


# Rack Armour® Fitting Instructions



## Installation Tools Also Available

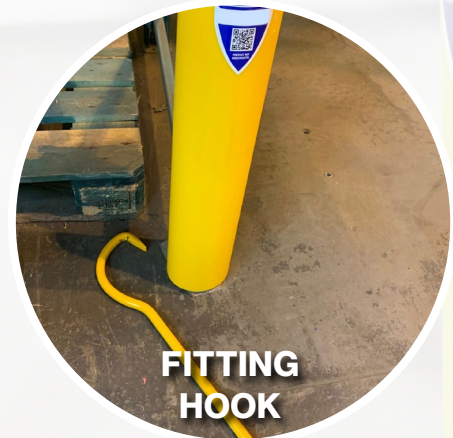

For effortless fitting,  
use our **Rack Armour®  
installation tools**, to  
securely position each  
protector in place.

**Both tools fits all sizes  
of Rack Armour®.**

**1**

Tilt the Rack Armour® guard forward so that the bottom of the unit is approximately 300mm clear of the upright and hold at an angle of 45 degrees.

This should then leave only the top edge of the guard touching the front face of the upright.



**2**

Slide one edge of the top of the Rack Armour® guard around the side of the frame/upright so that the edge of the guard hooks behind the frame profile.

Push the other side around so that the top of the guard clips onto the racking.



**3**

Ensure the top of the guard has clipped into place.

Holding the top of the guard with one hand push the bottom of the guard forward with the other hand until the whole of the guard has clipped onto the frame upright.



**4**

With the palm of your hand force the bottom edge of the guard across the face of the upright until it clips over the opposite side.

